



syn1588®

Abstract

Use this quick start guide to get started with the syn1588® Software Suite – basically the syn1588® PTP Stack and supporting utilities - in context of using a syn1588® PCIe NIC or syn1588® Dual NIC (both referred to as syn1588® NICs in this document).

The syn1588® Linux Live System is a Linux image with the respective drivers for the syn1588® NICs as well as all preinstalled software including the syn1588® PTP Stack. This data is included in the delivery of the syn1588® NICs as bootable USB drive (the wooden USB drive). If you no longer have access to this USB drive, please contact support@oregano.at to get electronically access to the current syn1588® Live System as an ISO file.

The syn1588® Linux Live System can be very useful as a quick evaluation tool for our syn1588® hardware and software. Furthermore, the ready-to-use Linux distribution may be installed to a local drive (HDD/SSD) as well.

In addition to the syn1588® Linux Live System the image contains the latest syn1588® software and documentation. It includes the most recent version of the syn1588® NIC drivers and the latest syn1588® PTP Stack and utility applications (e.g., eSync) for Linux as well as for Windows.

syn1588® Live System Content

You may access some of the syn1588® Linux Live System content without booting from the USB drive. This is very useful for installing the syn1588® Software Suite on a Windows PC. The following data is available in this way:

Folder	Content Description
syn1588	This folder contains the syn1588® Software Suite release notes and complimentary information about the release..
syn1588/doc	This folder contains the most recent version of the documents, the syn1588® User Guide, a quick start guide and application notes.
syn1588/sw	This folder contains all the necessary packages for installing the syn1588 Software Suite on your PC. It also contains starting projects with example applications for the syn1588 API and the shared memory API.

Release Notes

Document	Content Description
syn1588_release_overview (RN001)	This document gives a general overview of the current and last releases of the syn1588® Software Suite
syn1588_release_roadmap (RN002)	This document gives an overview of planned features for upcoming sny1588® Software Suite releases.
syn1588_release_OS_support (RN003)	This document gives an overview of the operating systems that are supported by the syn1588® Software Suite.
syn1588_software_suite_rn (RN004)	This document gives detailed information about features/improvements/bugfixes and known issues of the current and past releases.
syn1588_upcoming_changes (RN005)	This document gives migration recommendations and insight into upcoming changes of the current and future releases

Documentation

Document	Content Description
an001_register_map (AN001)	This application note provides you with a detailed description of the hardware registers of a syn1588® NICs, this will be useful for developing your own hardware-level applications. We recommend to use the syn1588® API for easier access to the hardware functionality of the syn1588® NICs.
an003_ptp_analysis (AN003)	This application note describes how to analyze the PTP port status using very simple means to identify frequent configuration issues like IP address mis-assignments, network issues or firewall blocking PTP traffic etc..
an004_syn1588nic_quick_start_guide (AN004)	This application note provides you with further instructions for installing a syn1588® NIC in your own system and setting it up for operation for PTP synchronization.
an005_syn1588_system_information_report (AN005)	This application note gives a short instruction for providing additional data in case of a service request. Please generate and provide the information as described when issuing a request for support to support@oregano.at .
an006_ptp_profiles (AN006)	This application note describes all IEEE1588 profiles supported by the syn1588® PTP Stack. Furthermore, it gives an overview of syn1588® products that support the corresponding profiles as well as an overview of hardware and software requirements to comply with a particular PTP profile.

an007_syn1588_event (AN007)	This application note describes the capabilities and configuration of the syn1588® event I/Os namely the Trigger output, the Period output, and the Event input.
an008_jitter_clean_pll (AN008)	This application note describes the procedure for using the external jitter-cleaner PLL on the syn1588® PCIe NIC Revision 2.0/2.1. This PLL can be used to remove the phase jitter of digitally generated, synchronized clock signals. Furthermore, it allows generation of high frequency single-ended clock signals (up to 150 MHz). It can also be used (in case of a syn1588® PCIe NIC Revision 2.1) to generate the NIC internal clock from a user-provided input clock.
an009_gps_receiver (AN009)	The syn1588® NICs allows the connection of an external GPS receiver that provides the absolute time for IEEE1588 master operations. This application note briefly describes the requirements for selecting an appropriate GPS receiver.
an010_syn1588_video (AN010)	This application note describes how to use the video add-on function available for the syn1588® PCIe NIC Revision 2.1.
an012_measuring_1PPS (AN012)	This application note describes how to measure and compare synchronization accuracy using 1PPS signals.
an013_syn1588_miits (AN013)	This application note describes how to use the user-programmable packet timestamping units of the syn1588® NICs.
an015_shared_memory_api (AN015)	This application note describes how to use the shared memory API with the syn1588® Software Suite
an018_syn1588_nic_faq (AN018)	This application note summarizes the frequently asked questions and their answers for the syn1588® PCIe NIC
an021_ptp_as_win_service (AN021)	This application note briefly describes how to run the syn1588® PTP Stack on Windows PCs as service that may be automatically started if the PC is booted.
an022_security (AN022)	This application note describes the use and configuration of PTP Security as specified in the IEEE1588-2019 standard (aka PTP V2.1).
an028_syn1588_ntp_vs_ptp_timestep (AN028)	This application note describes how to use the NTP mode includes in the syn1588®Clock_M IP core which is utilized in all syn1588® NICs.
an031_syn1588_802.1AS_2011SupportedFeatures (AN031)	This application note describes the supported features of 802.1AS in the syn1588® Software Suite
an034_using_redsync (AN034)	This application note describes usage scenarios for the syn1588® redSync utility which enables PTP redundancy.

an037_cmake_syn1588_ptpstack (AN037)	This application note provides an overview of the build environment for the syn1588® PTP Stack source code and is also applicable for the syn1588 API and shared memory API sources.
an038_syn1588_linux_live_system_quickstart_guide (AN038)	This application note
an039_syn1588_status_logging (AN039)	This application note describes the logging concepts used by the PTP Stack and other utilities
an041_syn1588PcieNicRev2.3 (AN041)	Using syn1588® PCIe NIC Revision 2.3 for Revision 2.0/1 users
syn1588_ptp_with_nic_binary	syn1588® Software Suite license agreement
syn1588_ptpmmm_gui_ug (UG002)	User guide for the PTP management GUI.
ug_syn1588 (UG001)	the general user guide for syn1588® products including all commands (command line options) descriptions of the syn1588® Software Suite

Installer

Installers for Linux

The syn1588[®] Software Suite is delivered as ready-to-use installers for both Linux and Windows operating systems.

To install it on a Linux system, the default location “/opt/oregano” should be used. We provide Debian packages for Debian based Linux distributions (like Ubuntu) and tar.gz source files for manual installation (can be used on any Linux distribution).

- Debian package for Linux, without syn1588[®] GUI applications
→ PTPv2_Linux32bit_*.deb
→ PTPv2_Linux64bit_*.deb
- Archive for Linux binaries, without syn1588[®] GUI applications
→ PTPv2_Linux32bit_*.tar.gz
→ PTPv2_Linux64bit_*.tar.gz
- Archive for Linux binaries, with syn1588[®] GUI applications
→ PTPv2_Linux64bit_gui*.tar.gz
- Debian package for Linux, with syn1588[®] GUI applications
→ PTPv2_Linux64bit_gui_*.deb

This is an example for installing a Debian package:

```
> dpkg -i <chosen deb package>
```

Installers for Windows

To install it on a Windows system execute the Windows Installer and follow the instructions. You may chose a suitable target location in this installer.

- Windows Installer with syn1588[®] GUI applications
→ PTPv2_Win32bit_*.exe
- Archive for Windows binaries with syn1588[®] GUI applications
→ PTPv2_Win32bit_*.zip

The installation will contain the following sub-directory structure:

Folder	Content Description
bin	This folder contains the syn1588® Software Suite application binaries
etc/ptpv2	This folder contains example configuration files for different PTP profiles supported by the syn1588® PTP Stack.
share/doc/ptpv2	This folder contains the license for use of the syn1588® Software Suite binaries.

The following table shows a list of the syn1588® Software Suite applications and a brief description:

Binary	Usage
esync / esync.exe	This utility is used for external synchronization to GPS devices or other time sources.
fsync / fsync.exe	This utility is used for configuring a syn1588® PCIe NIC to use external frequency sources or provide frequency to external devices via the jitter cleaner PLL. → (AN008)
lsync / lsync.exe	This utility is used for local synchronization of different clocks on the local system. For example, syncing the system clock to the hardware clock on an Oregano syn1588® PCIe NIC.
ptp / ptp.exe	This is the syn1588® PTP Stack for version 2 of the PTP protocol
ptpmmm / ptpmmm.exe	This utility is used to query PTP-nodes using the syn1588® PTP Management Tool.
syn1588 / syn1588.exe	This utility is used to query the registers of a local syn1588® hardware clock on an Oregano syn1588® NIC.
redsync / redsync.exe	This utility allows the redundant synchronization of a PTP slave.
vsync / vsync.exe	This utility allows the use of external video signals and generation of video signals for external devices. → (AN010)

GUI	Usage
ptpmmm_gui / ptpmmm_gui.exe	This utility provides a graphical user interface to remotely query PTP data of PTP instances in the network. Note: this utility cannot be used to query information from a local PTP instance!

syn1588[®] API

The syn1588 API provides access to the syn1588 PCIe NIC, syn1588[®] Dual NIC and IP Core hardware functions, e.g., timestamping packets or external events, generating one-shot or periodic signals. You will find the syn1588 API and example applications on the syn1588[®] Linux Live System in the following archive:

```
syn1588/sw/export_srcsyn1588API.zip
```

Follow the guidelines in (AN037) for setting up the CMake build environment for developing your own applications utilizing the syn1588 API. Follow the guidelines in the .zip archive to get more information about the syn1588 API.

Shared memory API

The shared memory API provides you access to the syn1588[®] PTP Stack and utilities during runtime. You can use it to get status information as well as directly interacting with the applications. You will find the shared memory API and example applications on the syn1588[®] Linux Live System in the following archive:

```
syn1588/sw/export_srcsharedmemoryAPI.zip.
```

Follow the guidelines in (AN037) for setting up the CMake build environment for developing your own applications utilizing the shared memory API. Follow the guidelines in the .zip archive and (AN015) to get more information about the shared memory API.

Requirements

The syn1588[®] Linux Live System is based on Ubuntu Linux 20.04.0 (Linux Kernel 5.4). The basic system requirements are the same as for Ubuntu Linux 20.04.

The minimum system requirements are:

- 2 GHz dual core processor
- 4 GB RAM (system memory)
- 25 GB of hard drive space for installation (optional)
- Display: VGA capable of 1024x768 screen resolution
- syn1588[®] PCIe NIC installed in the system

The syn1588[®] Linux Life System provides UEFI Boot and Legacy BIOS Boot.

Install the syn1588® Linux Live System to hard disk

Installing the syn1588® Linux Live System offers some advantages in comparison to booting the syn1588® Linux Live System from the USB drive:

- Keyboard Layout settings are persistent.
- You get a fully working Ubuntu Linux 20.04 System with the Oregano syn1588® PCIe NIC drivers and software preinstalled.

The shortcut “Install Ubuntu 20.04” will start the Ubiquity-Installer. The Ubiquity-Installer will guide you through the process of installing the syn1588® Linux Live System to the hard disk of your system.

Create a bootable USB drive from the syn1588® Linux Live System ISO file

Each syn1588® PCIe NIC and syn1588® Dual NIC are delivered with a wooden USB drive providing the syn1588® Linux Live System. If you want to duplicate the USB drive or you lost your USB drive please contact support@oregano.at. We can provide you with a ISO file for creating your own bootable USB drive with the syn1588® Linux Live System.

To create a bootable USB drive follow this procedure:

1. Download the Freeware “Rufus” v3.14.1788 (other versions should work too)→ https://rufus.ie/en_US/,
2. Configure Rufus as shown in Figure 1. This is typically the default setting, only the syn1588® Linux Live System ISO file has to be chosen.
3. “START”
4. Select the ISO mode as shown in Figure 2.
5. After a successful operation (typically within 10 minutes) the USB drive will contain the syn1588® Linux Live System and can be used as bootable USB drive.

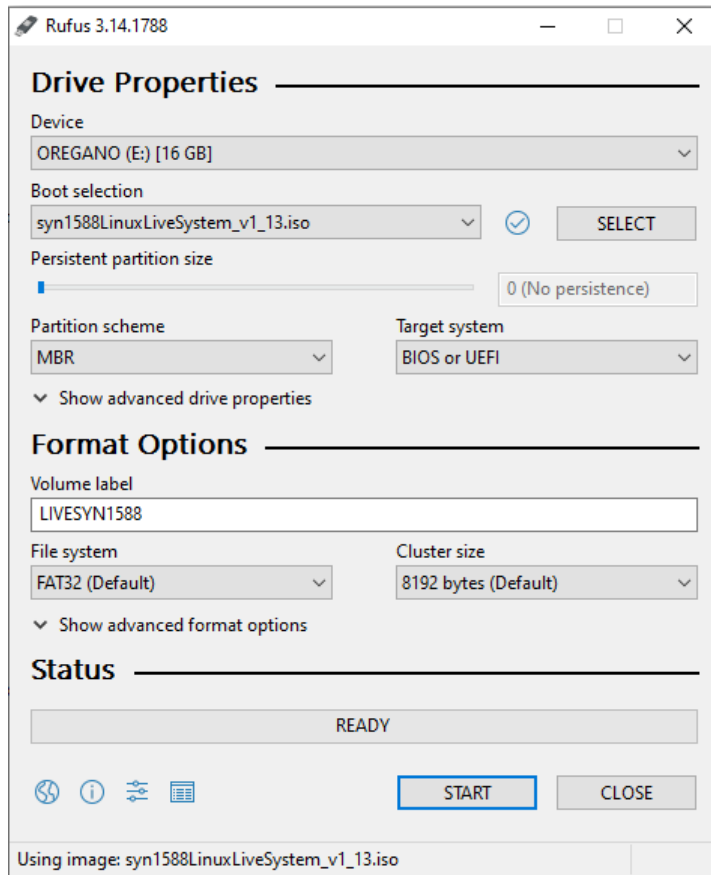


Figure 1: Creating a bootable USB with Rufus, basic configuration

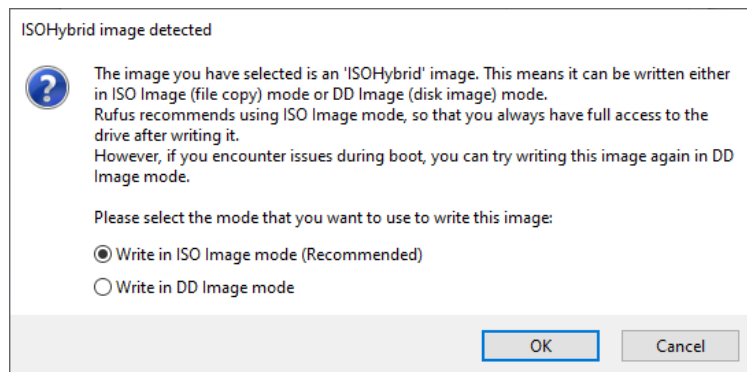


Figure 2: Creating a bootable USB with Rufus, select ISO mode

Common tasks in the syn1588[®] Linux Live System

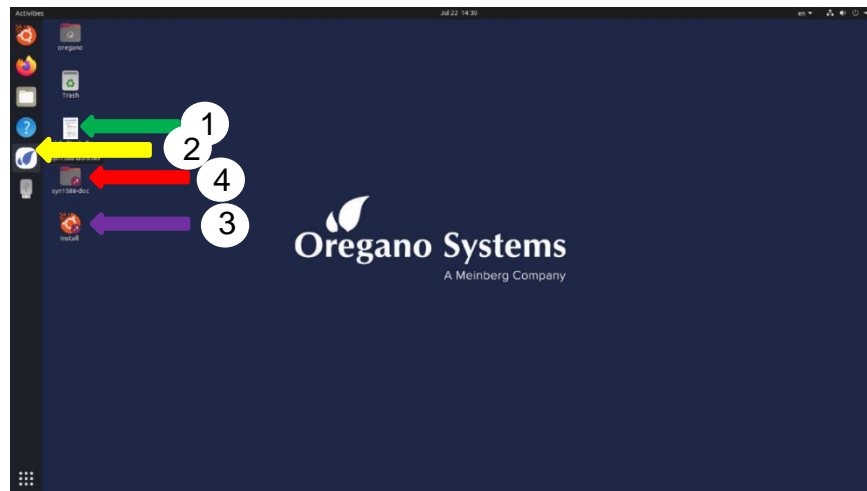


Figure 3: syn1588[®] Linux Live System Desktop

This chapter explains some of the most common tasks which can be done in the syn1588[®] Linux Live System. Figure 3 shows four colored arrows which are described in the following:

1. Green Arrow

This document provides a good entry point for using the syn1588[®] Live System together with the syn1588[®] NICs.

2. Yellow Arrow

The syn1588 launcher can be used to start some of the syn1588[®] Software Suite applications for testing basic operation (e.g., testing PTP synchronization).

3. Purple Arrow

Via this icon you can install the syn1588[®] Linux Live System on your PC. This installation will include the same functionality as the syn1588[®] Linux Live System itself (e.g., Linux driver installed for a syn1588[®] NIC)

4. Red Arrow

Follow this link to access the extensive documentation. This will open a file browser for the directory /opt/oregano/doc which contains the syn1588[®] User Guide and various application notes.

syn1588[®] Launcher

The syn1588[®] Launcher is a drop-down menu which will show a list of applications that can be executed. Click on the syn1588[®] Launcher situated on the taskbar in the left of the screen and a menu will appear. The next chapters describe how to access and run various syn1588[®] applications via this launcher.


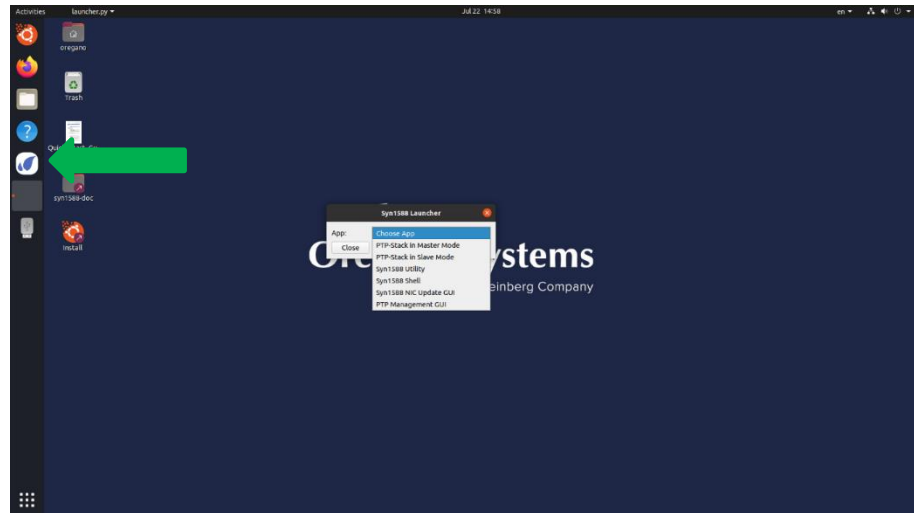


Figure 4 Click on the syn1588 Launcher

Starting a syn1588[®] PTP Stack with default settings in Master mode

To start the syn1588[®] PTP Stack with default settings and PTP Master mode:

1. Start the syn1588[®] Launcher icon at the left taskbar. (Figure 4)
2. Select "PTP-Stack in Master Mode" in the drop-down menu (Figure 5)
3. Select the desired interface to connect with the syn1588[®] PTP Stack (Figure 6)

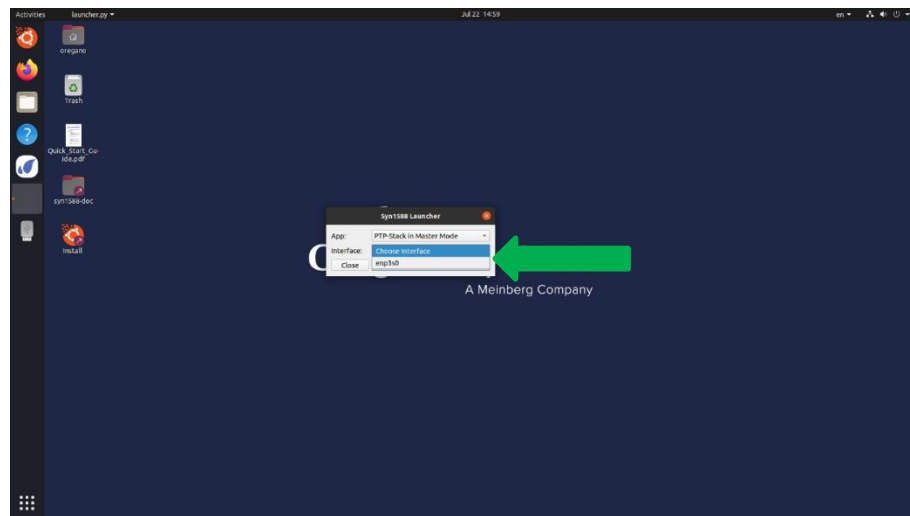

4. Press "Run"

5. A console window will appear showing the log output of the syn1588[®] PTP Stack (Figure 7)

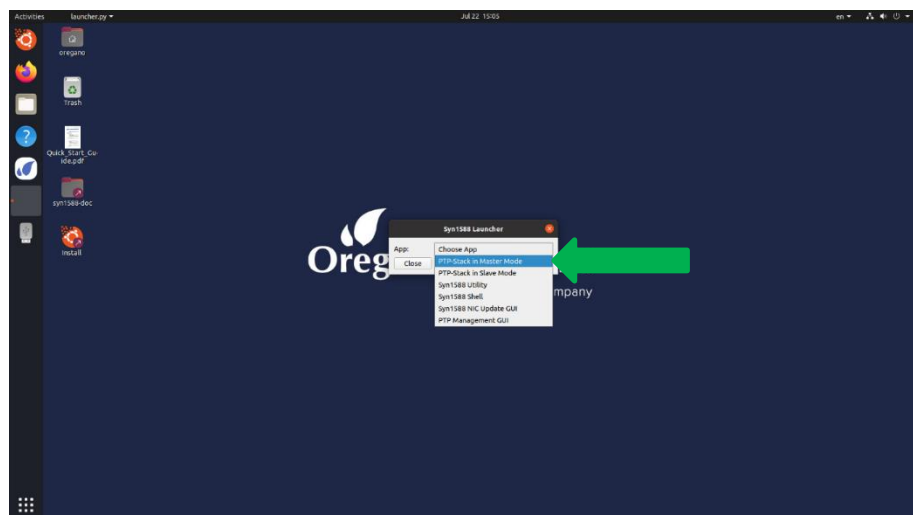


Figure 5 Select to run "PTP-Stack in Master Mode"

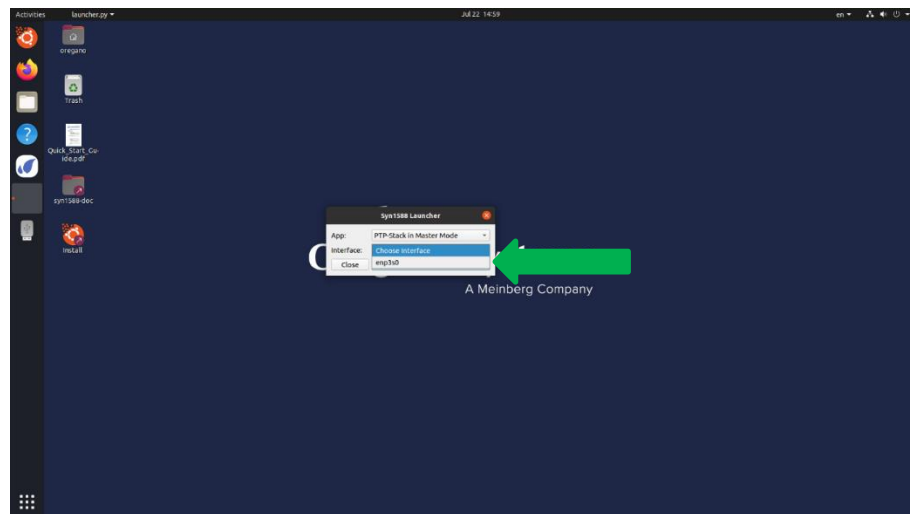


Figure 6 Select the desired interface

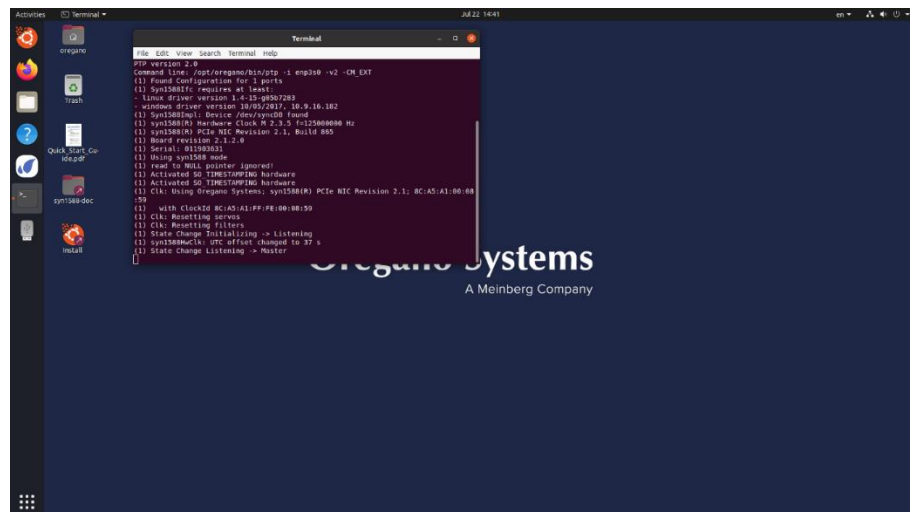


Figure 7 syn1588® PTP Stack in Master Mode running

Starting a syn1588® PTP Stack with default settings in Slave mode

To start the syn1588® PTP Stack with default settings and Slave mode:

1. Start the syn1588® Launcher icon at the left taskbar. (Figure 4)
2. Select “PTP-Stack in Slave mode” in the drop-down menu (Figure 8)
3. Select the desired interface to connect with the syn1588® PTP Stack (Figure 9) Note that this drop-down menu will only list syn1588® NIC cards!
4. Press “Run”
5. A console window will appear which shows the log output of the syn1588® PTP Stack (Figure 10)

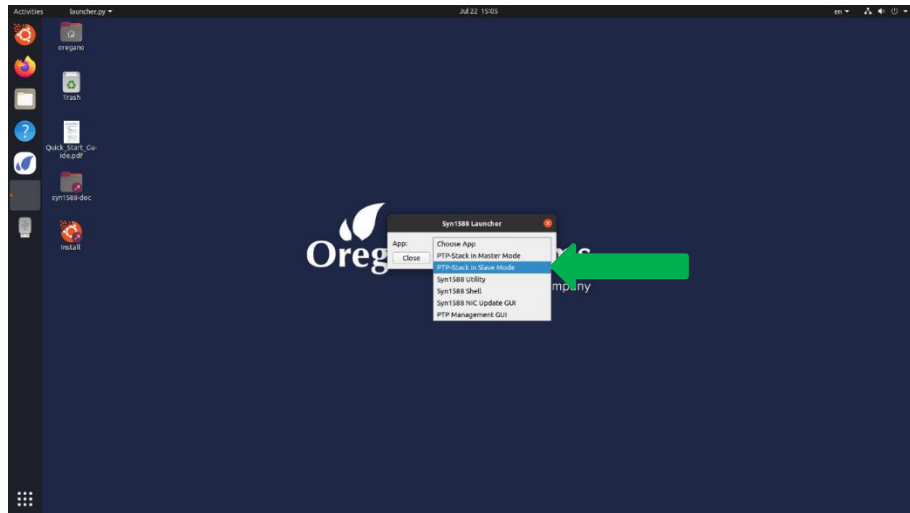


Figure 8 Select to run “PTP-Stack in Slave Mode”

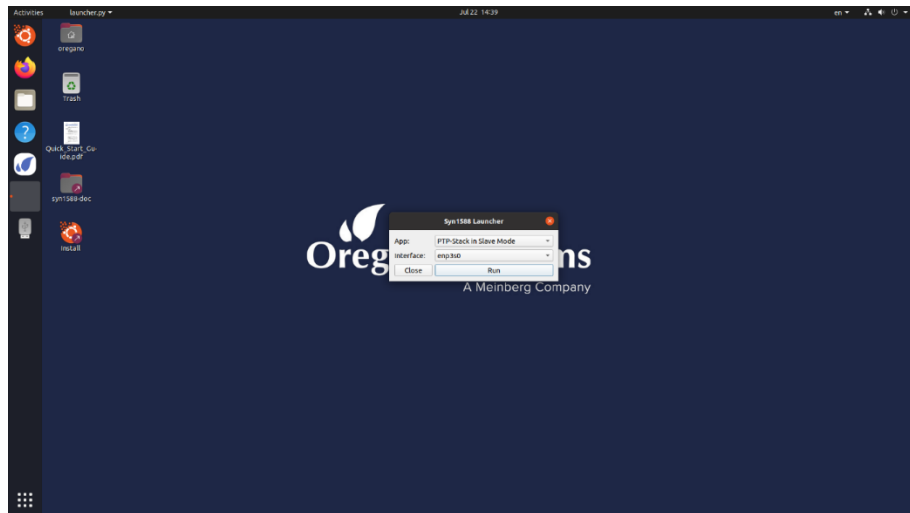


Figure 9 Select the desired interface

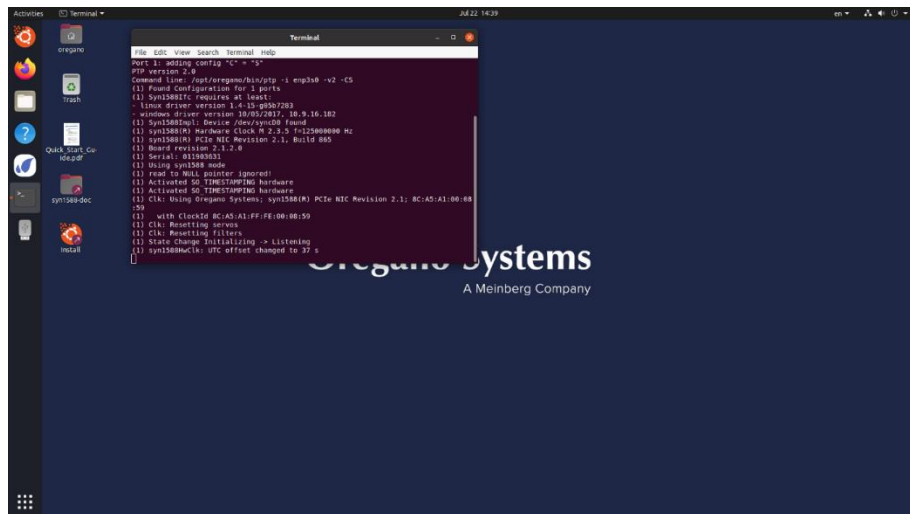


Figure 10 syn1588® PTP Stack in Slave Mode running

Starting a syn1588 Utility

To start the syn1588 Utility:

1. Start the syn1588® Launcher icon at the left taskbar. (Figure 4)
2. Select “PTP-Stack in Slave Mode” in the drop-down menu (Figure 8)
3. Select the desired interface to connect with the syn1588® PTP Stack (Figure 11) Note that this drop-down menu will only list syn1588® NIC cards!
4. Press “Run”
5. A console window will appear which can be used to interact with the syn1588 utility (Figure 12)

The syn1588 utility can be used to access the syn1588® NIC on register level and to use a subset of syn1588® API functions from the command line. Refer to the help output of this utility and the syn1588® User Guide for more information.

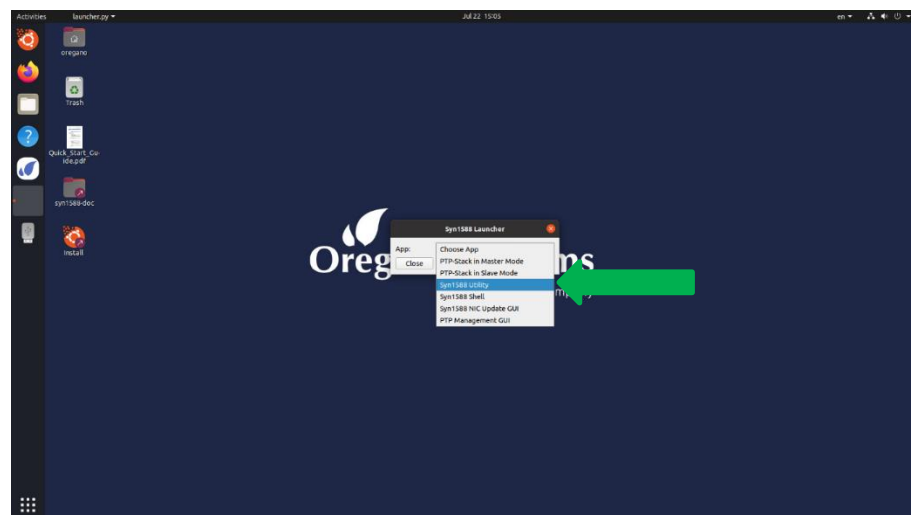


Figure 11 Select to run the syn1588® Utility

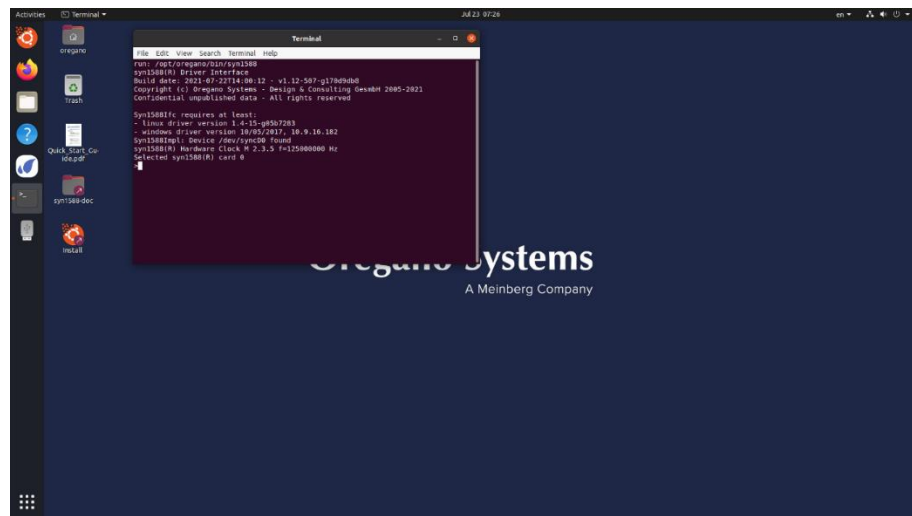


Figure 12 syn1588 Utility output

Starting a syn1588® Shell

To start the syn1588® Shell click in the syn1588 Launcher the “syn1588 Shell” and then press “Run” (Figure 13). It will open a root shell with the working directory set to “/opt/oregano”(Figure 14).

This can be used to access the full feature-set of the syn1588® Software Suite applications that are located in this directory.

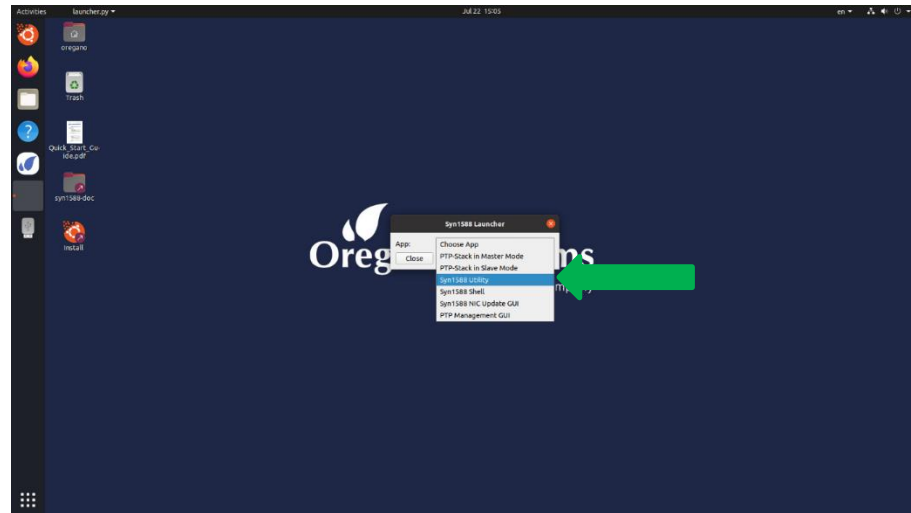


Figure 13 Select to run the syn1588® Utility

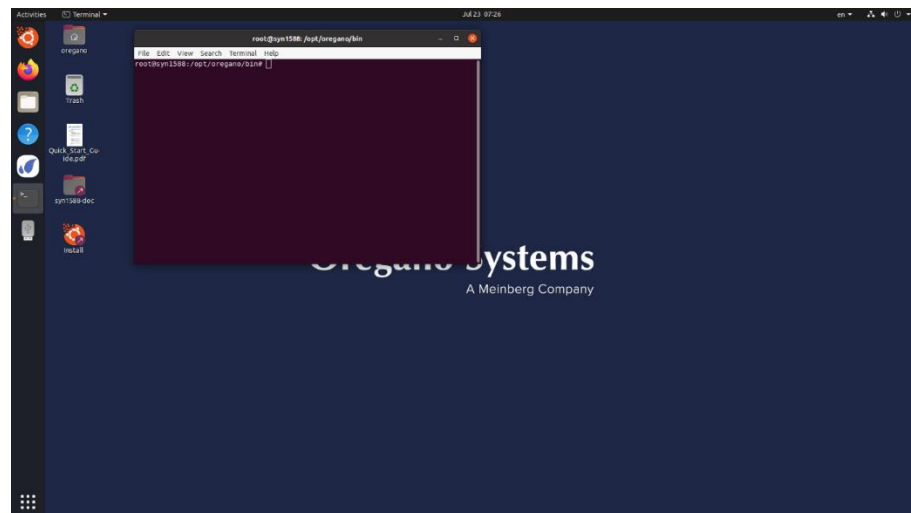


Figure 14 syn1588 Shell terminal window

Starting a syn1588® PTP Management GUI

To start a syn1588® PTP Management GUI select the “PTP Management GUI” from the syn1588® Launcher and then press “Run” (Figure 15). It will open a graphic user interface from which the user is able to remotely monitor, configure, and control other PTP clock types like Ordinary Clocks or Boundary Clocks (Figure 16). Refer also to the user guide for this utility → (UG002)

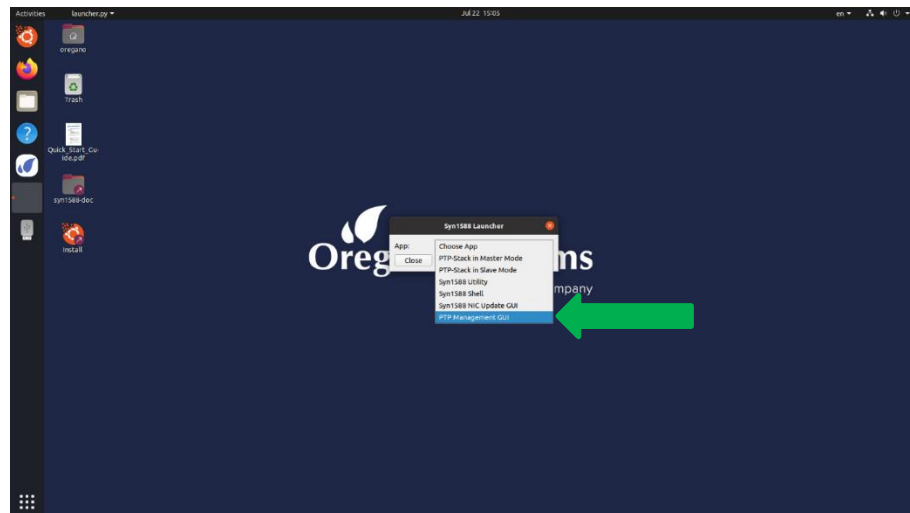


Figure 15 Select to run the PTP Management GUI

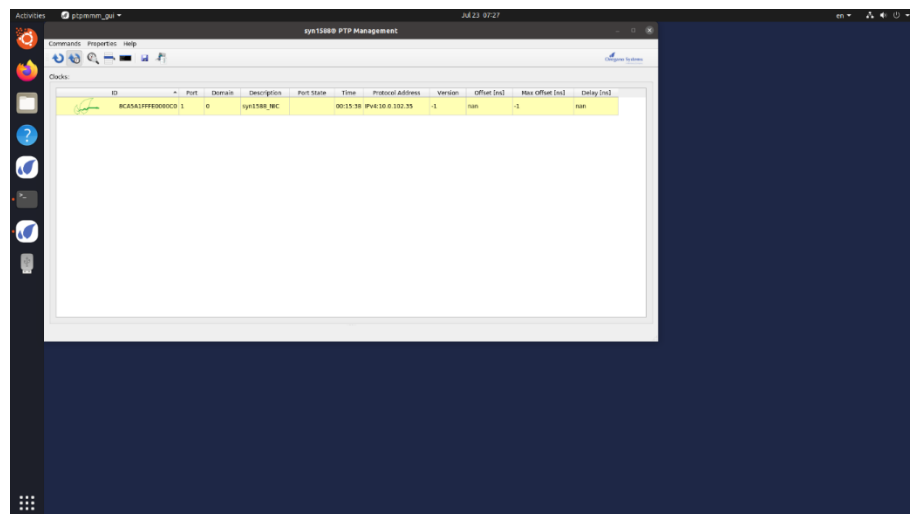


Figure 16 The PTP Management GUI window

Changing the keyboard layout in the syn1588® Linux Live System

To change the keyboard layout, follow the guide in this chapter.

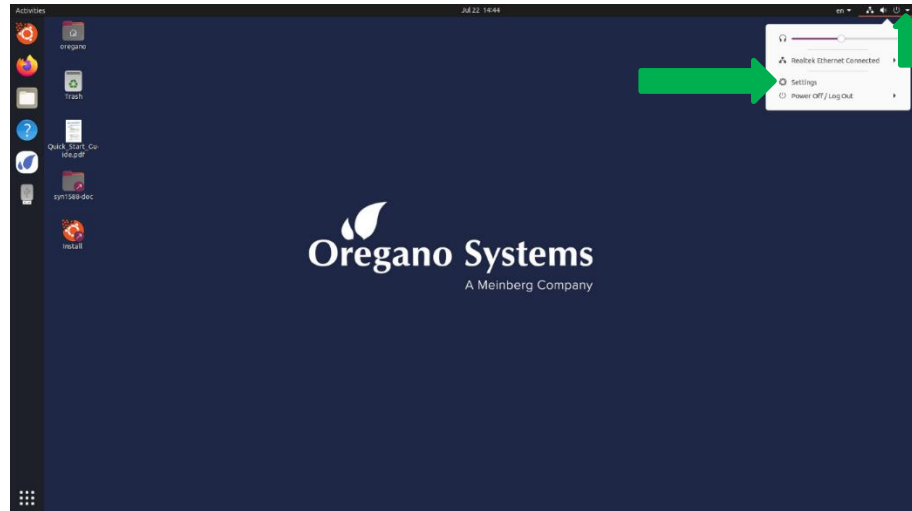


Figure 17 Click on the small arrow and select “Settings”

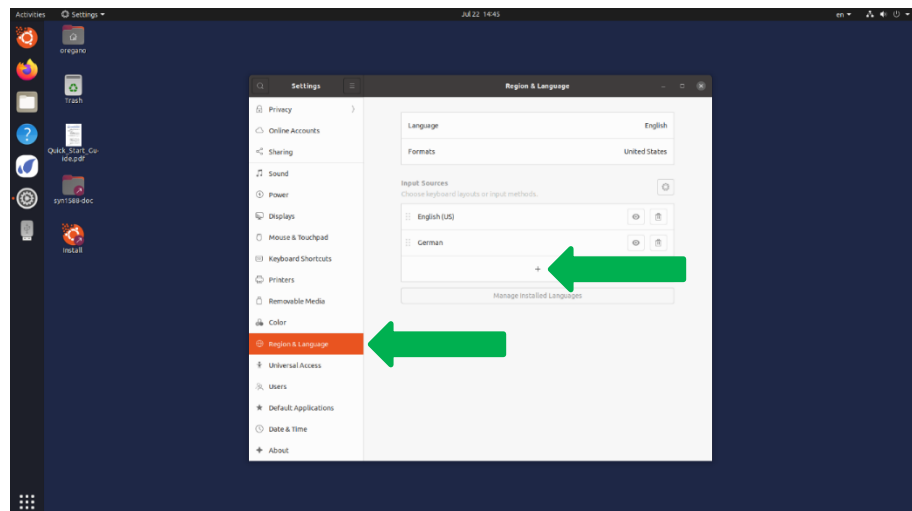


Figure 18 Click on Region & Languages and then on the “+” sign

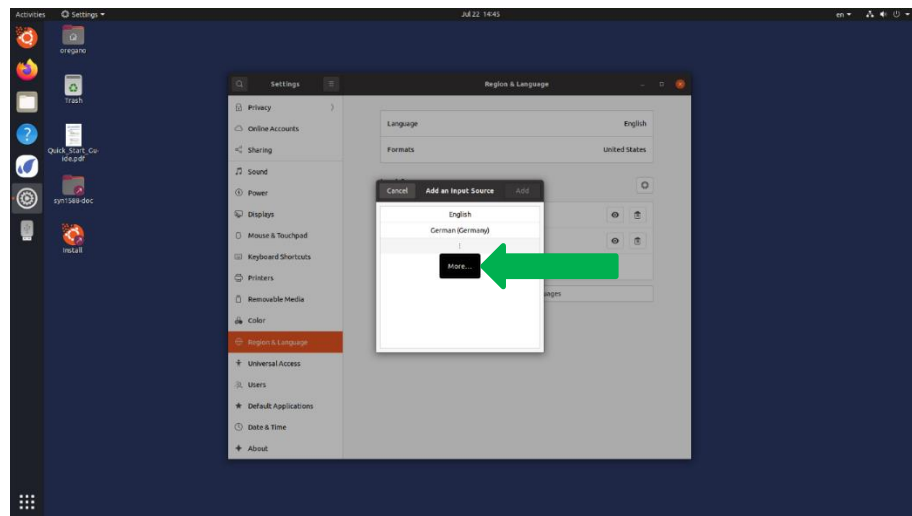


Figure 19 Click on the “three vertical dots” sign

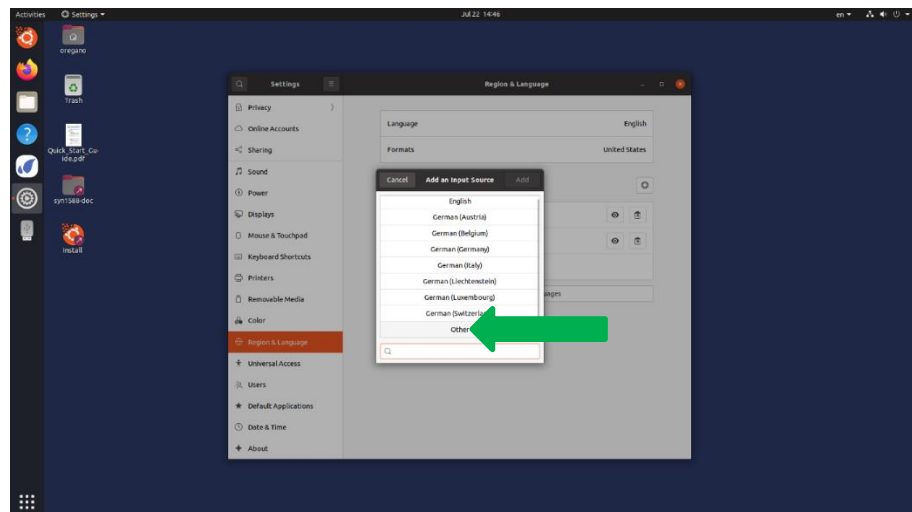


Figure 20 Type in the textbox the keyboard layout

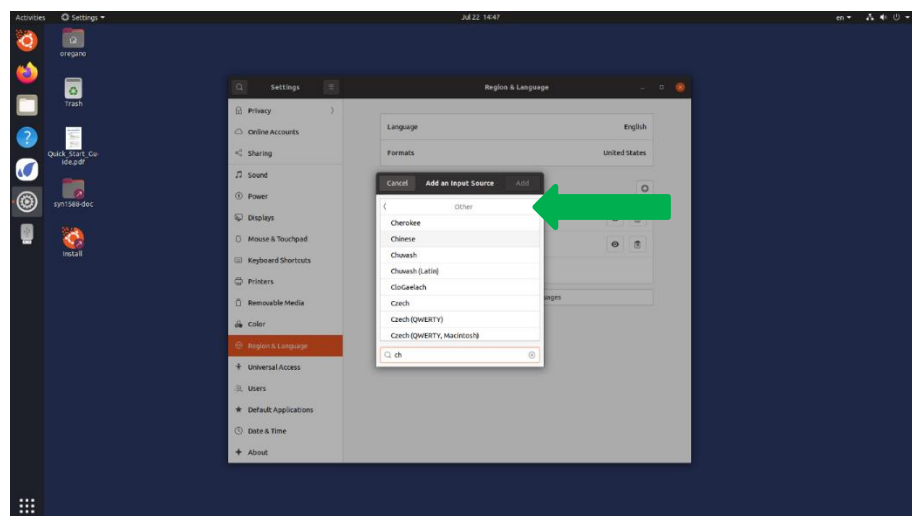


Figure 21 Choose from the scroll down the desired keyboard layout

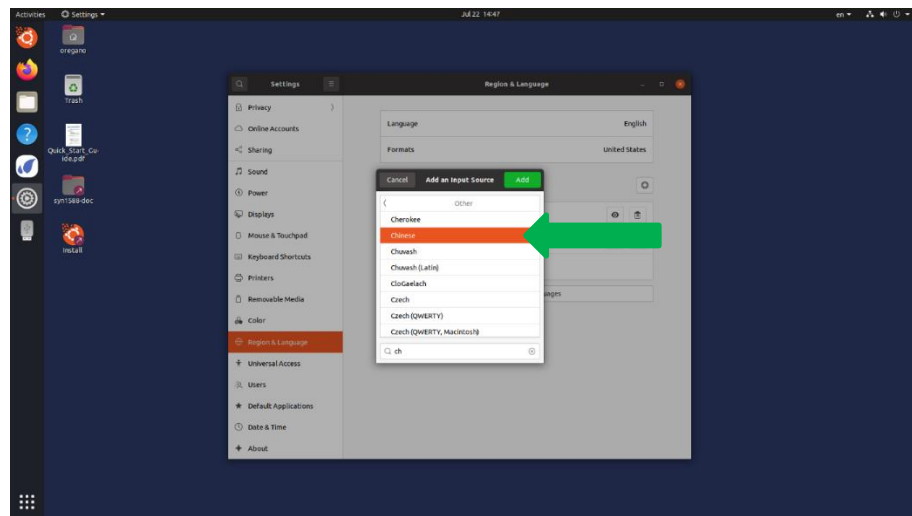


Figure 22 Click on “Add”

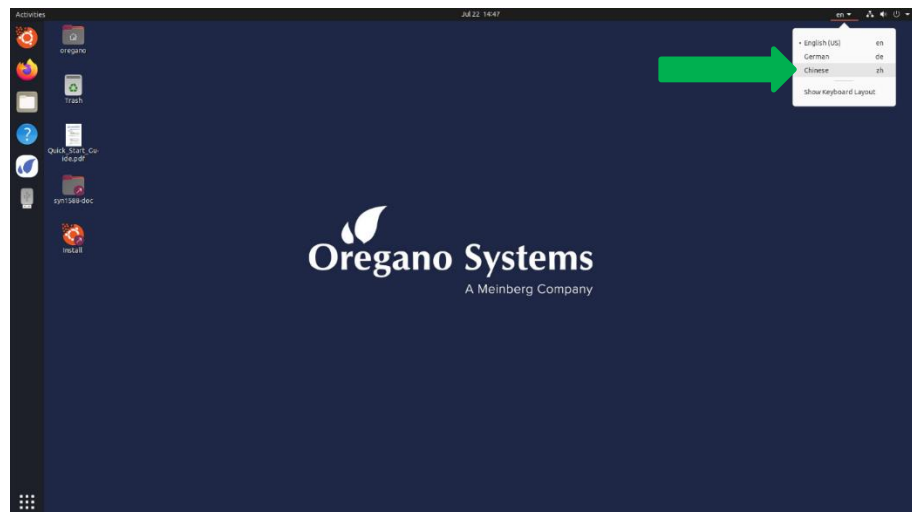


Figure 23 Click on the desired Keyboard Layout

Version history

Version 1.17.2 – February 2024

Update for release v1.17, minor corrections

Version 1.17.1 – October 2023

Update for release v1.17

Version 1.16.1 – November 2022

Update for release v1.16, removed syn1588 NIC Updater

Version 1.15.1 – June 2022

Update for release v1.15

Version 1.14.2 – January 2022

Update for release v1.14

Version 1.14.1 – December 2021

Update for release v1.14

Version 1.13.3 – October 2021

Editorial Review for upcoming release

Version 1.13.2 - September 2021


Added sub-chapters in the “Installer” chapter

Version 1.13.1 - July 2021

Added description for creating a bootable USB drive

Version 1.13.0 - July 2021

Initial version

 <p>Oregano Systems A Meinberg Company</p> <p>Franzosengraben 8 A-1030 Vienna Austria http://oregano.at contact@oregano.at</p>	<p>Copyright © 2024 Oregano Systems – Design & Consulting GmbH ALL RIGHTS RESERVED.</p> <p>Oregano Systems does not assume any liability arising out of the application or use of any product described or shown herein nor does it convey any license under its patents, copyrights, or any rights of others.</p> <p>Licenses or any other rights such as, but not limited to, patents, utility models, trademarks or tradenames, are neither granted nor conveyed by this document, nor does this document constitute any obligation of the disclosing party to grant or convey such rights to the receiving party.</p> <p>Oregano Systems reserves the right to make changes, at any time without notice, in order to improve reliability, function or design. Oregano Systems will not assume responsibility for the use of any circuitry described herein.</p> <p>All trademarks used in this document are the property of their respective owners.</p>
--	--